

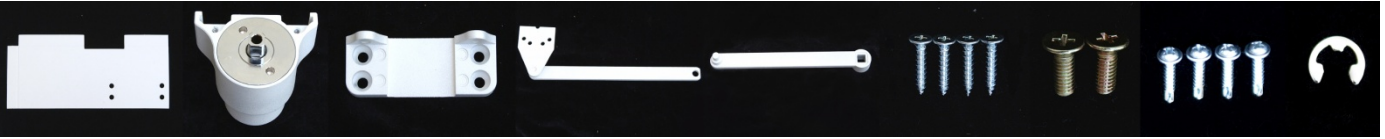


Installation guide of link arm door closer

Guide Door Closer Housing Bracket Arm Bracket + Second Arm Past Arm Screw #1 Screw #2 Screw #3 E-ring

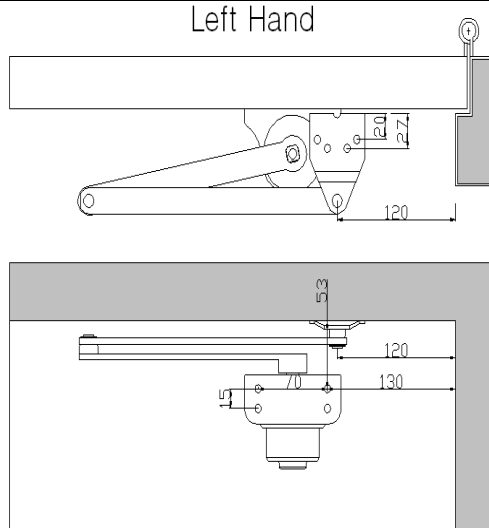

1. Installation on hinge area (If pivot hinge is located in the left, it is a LH type. If it is located in the right, it is a RH type.)

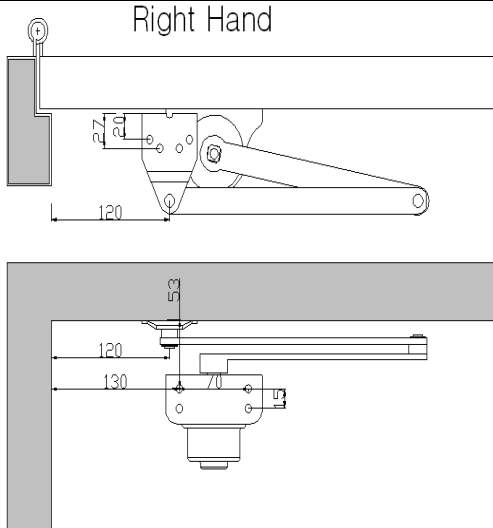

7. Precaution

- 1) The function of door closer can be fully guaranteed only when installation is done under required installation instruction.
- 2) Reinforcement on the area of installation is sure to be made.
- 3) When door closer is out of work, immediate action to remove it from the door should be taken to prevent any human damage that may be caused by fast spring working speed.

2. Please indicate the installation points on the facing side of both frame and door by using an installations guide under the door closed position.




3. Please bore holes and fix the housing bracket and arm bracket with screws.

Housing Bracket
(Screw #3)



Arm Bracket
(Screw #1)

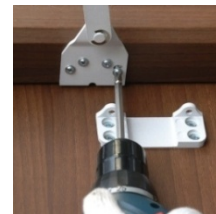

4. Please assemble the door closer and housing bracket with screws from the top under the door opening position.



5. Please insert the first arm into the shaft and connect the second arm under the door closed position, and then put E-ring to prevent any detachment.



6. Please adjust an open & close speed through a speed adjuster of shaft by repeated actions for opening and closing the door.

