



Installation guide of slide arm door closer

P A R T S L I S T	Installation guide	Door closer	Housing bracket	Arm+Slide rail	Screw #1	Screw #2


1. Installation on hinge area (If pivot hinge is located in the left, it is a LH type. If it is located in the right, it is a RH type.)

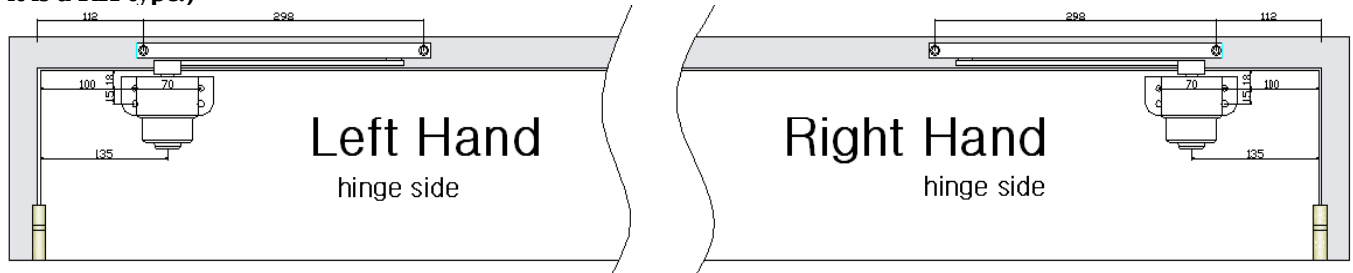

2. Please puncture the holes after indicating them with installation guide while the door is closed.

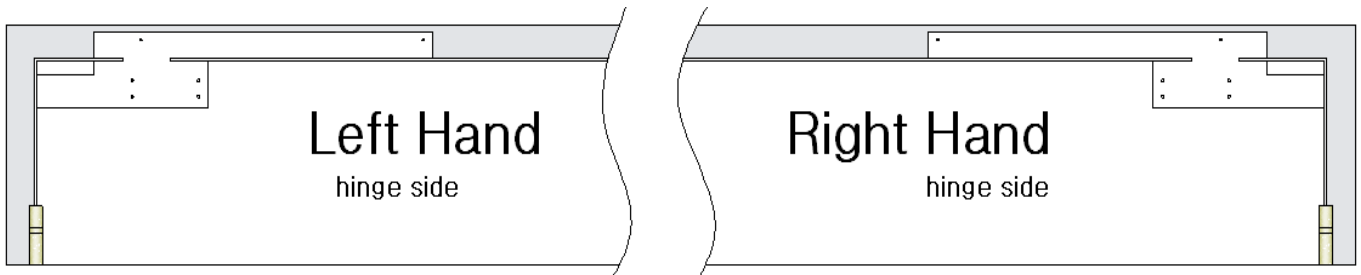

3. Please fix screw #1 on bracket housing.

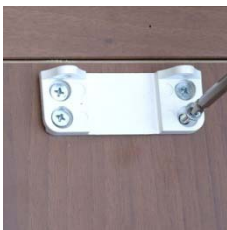

4. Please assemble door closer and bracket housing and fix screw #2 from the top.



5. Please insert the arm onto the door closer shaft and fix screw #1 after paralleling the slide rail with door frame after fixing the screw #1 on the hinge area of slide rail.



6. Please adjust the speed by using a speed adjuster while door is opened and closed.



7. Precaution

- 1) The function of door closer can be fully guaranteed only when installation is done under required installation instruction.
- 2) Reinforcement on the area of installation is sure to be made.
- 3) When door closer is out of work, immediate action to remove it from the door should be taken to prevent any human damage that may be caused by fast spring working speed.